


**Awowo**

**TK-406**

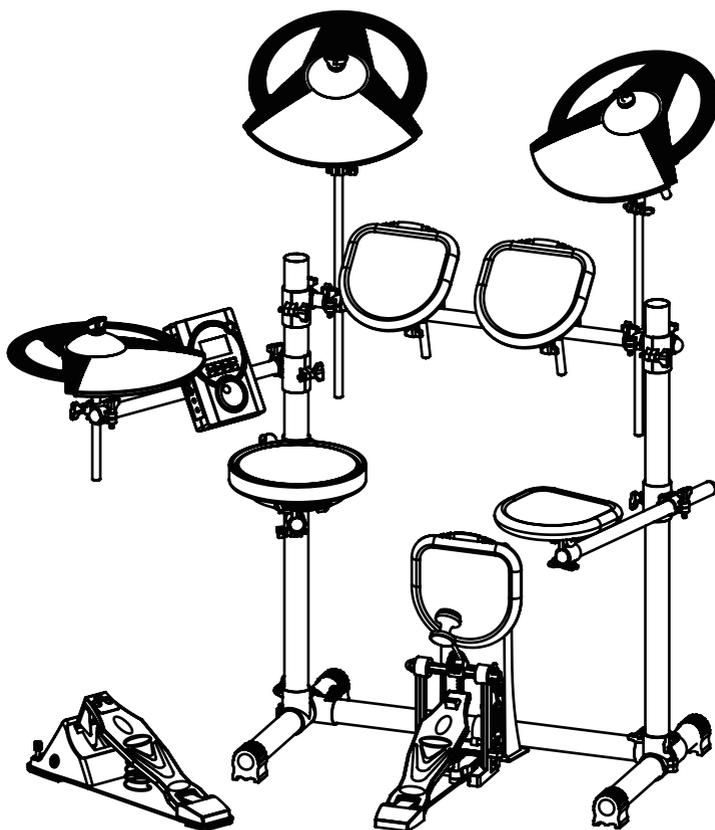

**ELECTRONIC DRUM SET  
USER MANUAL**

# Operation Warning

Instruction for Prevention of Fire, Electric Shock, & Physical Injury

## About Warning & Caution Signs

 <b>WARNING</b>	This sign indicates the risk of serious physical injury or even death. Please operate the machine according to instructions.
 <b>CAUTION</b>	This sign indicates the risk of serious physical injury and even death. Please operate the machine according to instructions.  *Object damage refers to any harm or adverse effects to household, furniture, pets, and etc.

## About Signs

	This sign indicates a warning or caution. Please read the accompanied instruction to prevent any dangers.
	This sign indicates any forbidden activity.
	This sign indicates an instructional procedure for users to follow with.

**ALWAYS FOLLOW THE INSTRUCTIONS AS DESCRIBED BELOW**

## **WARNING**

Please read the following instruction before operation.



Do not open or, in any way, modify the machine or adapter.



Do not attempt to repair the machine, or replace any internal parts by yourself, unless instructed to do so by the manual. In case of technical need, please contact with your retailer, or their customer service, or any recognized retailers printed on the information page.



Do not store or operate the machine under the following described conditions:

- Near areas with extreme temperature. (For example, in the car under the sun, near a heat venting pipe, and etc.)
- In very humid environments. (For example, in the bathroom, in the toilet, on wet floor, and etc.)
- Exposing to rain.
- In the sand.
- In shaking & unstable environments.



Operate the machine with the recommended support stands and accessories only.



## **WARNING**

For proper operation, make sure that the support stands are placed on flat and stable ground in order to support the machine safely and stably.



Use only the included adapter. Make sure that the voltage of the socket matches the voltage indicated on your adapter to prevent damage or electric shock.



Please do not over-twist or over-bend the power cable, or place any objects on it. Doing so may result in short-circuit that can lead to fire and electric shock.



Please do not operate the machine with high volume over a long period of time regardless of using an amplifier or a headphone, to prevent damage to your hearing. Should any hearing discomfort results, stop using the machine and consult a hearing doctor.



Prevent letting any object like coins or pins, or any liquid slip inside the machine.



## **WARNING**

Should any of the following situations result, please stop operation and remove the adapter from the socket, and consult with your retailer, the nearest customer service, or any of the recognized retailers listed on the information page:

- The adapter or the power cable is damaged.
- An object, or liquid has slipped into the interior of the machine.
- The machine has been exposed in rain, or has got wet.
- The machine is not operating or is operating with noticeable problems.



If there were children in the household, the adults should be responsible of ateaching the children to follow the safety precautions explained in the manual.



Do not share the power supply with too many adapters at the same time. When using an extension power supply, please make sure that the total power usage does not exceed the limit stated on the extension power supply. Doing so may result in melting of the cables and fire.



When using the machine in other countries, please consult your retailer, the nearest customer service, or any of the recognized retailers listed on the information page.



## **CAUTION**

Always place the machine and the adapter in areas with good airflow.



When inserting or removing the power cable into/from the socket or the machine, always grab the plug instead of the cable.



If you plan not to operate the machine for a long period of time, please remove the adapter from the socket.



To prevent the cables from tangling, place the cables out of reach of children.



Do not place heavy objects on the machine.



When moving the machine, or during insertion/removal of the plug, always use dry hands.



When moving the machine, or during insertion/removal of the plug, always use dry hands.



Please turn off the power and remove the adapter from the socket before cleaning the machine.



When there is a risk of lightning strike, please remove the adapter from the socket.



# Precautions

Please read the following precautions aside from the safety instructions

## Power Supply

- Do not share the power supply with other electronics that can produce cable statics, for example, electric motors.
- It is normal for direct current (DC) to produce heat with extended usage, and there is no need to be worried.
- Before connecting the machine to other equipments, always turn off the power to prevent damage.

## Placement/Location

- Operating the machine near a post-amplifier or machines that use high-power converters, buzzing may result. To prevent this problem, please change the machine's facing direction, or place the machine away from the interrupting sources.
- This machine may interfere with the radios and televisions. Please do not operate the machines near them.
- Do not place the machine under sun, or near any heat source, as high temperature may cause the machine to deform or discolor.
- To prevent permanent damage, please do not expose the machine to moist or in humid environments.

## Maintenance

- For normal cleaning, please use soft cloth with little or no moist for wiping. For tougher spots, use neutral-pH and wear-free cleaner then use dry soft cloth to wipe clean.
- Never use volatile oil, diluting solutions, alcohol, or any other kinds of solvents to prevent the machine from deforming or discoloring.

 
## Additional Precautions

- During operation, please handle with care to prevent any damage.
- Do not hit or press against the display screen.
- Always grab the heads of cables during insertion/removal to prevent damage to the cables or the machine.
- To prevent disturbing your neighbors, please operate the machine at an acceptable volume, or use a headphone, especially at nights.
- Although the machine is designed to minimize unwanted noise during operation, the percussive sound may still pass through the floor or walls, resulting in unexpected noise. Please be careful not to let such sound disturb your neighbors, especially at nights.
- When transporting the machine, please use the original or similar stuffing and box.
- Please use official cables for connection. When using cables from other companies, please note the following:  
  
Some cables may consist of resistors, which may be incompatible and result in extremely low volume. For information about the specifications of cables, please consult with the manufacturers.
- Please do not hit the pads with excessive force to prevent the risk of hurting your fingers.

## 零件

**A1**

音源機



x1

**A2**

小鼓



x1

**A3**

Tom



x4

**A4**

 
鈸



x3

**A5**

Hi-Hat  
控制器



x1

**A6**

大鼓踏板



x1

**A7**

大鼓&  
背膠止滑墊



x1

**L1**

 
變壓器



x1

**L2**

L-L 立體聲  
音源線  
(藍)



x1

**L3**

 
L-L 單聲道  
音源線  
(黑)



x4

**L4**


L-L 立體聲  
音源線  
(藍)



x3

**L5**

 L-L 單聲道  
音源線  
(黑)



x1

**B1**

說明書



x2

**B2**

鼓棒  
(1雙)



x1

**B3**

束線帶



x2

**B4**

鼓鎖



x1

**B5**

耳機



x1

## 組裝零件

P1

腳墊



x4

P2

Ø3.81 (cm)  
管塞



x2

P3

Ø2.22 (cm)  
管塞



x8

## 關節

C1

Ø2.22 Pad  
固定接頭



x2

C2

Ø1.27 Pad  
固定接頭



x2

C3

調整桿



x2

C4

U型接頭&  
兩個組裝  
螺絲



x1

## 組裝零件

T1

蝴蝶螺絲



x10

T2

螺母



x9

## 內含備品

T1~T2



x2

## 支架

Ø3.81cm

S1



40cm x1

 


S2



57cm x1

S3



40cm x1



S4



75cm x1



S5

 


75cm x1



Ø2.22cm


S6



65cm x1



 S7



40cm x1



S8



40cm x2

 
Ø1.27cm

S9



40cm x2

S10





20cm x3

# Step 1

 S1  X1 (40 cm)


S2  X1 (57 cm)

S3  X1 (40 cm)

 
S4  X1 (75 cm)

S5  X1 (75 cm)

 S6  X1 (65 cm)


S7  X1 (40 cm)

P1  X4

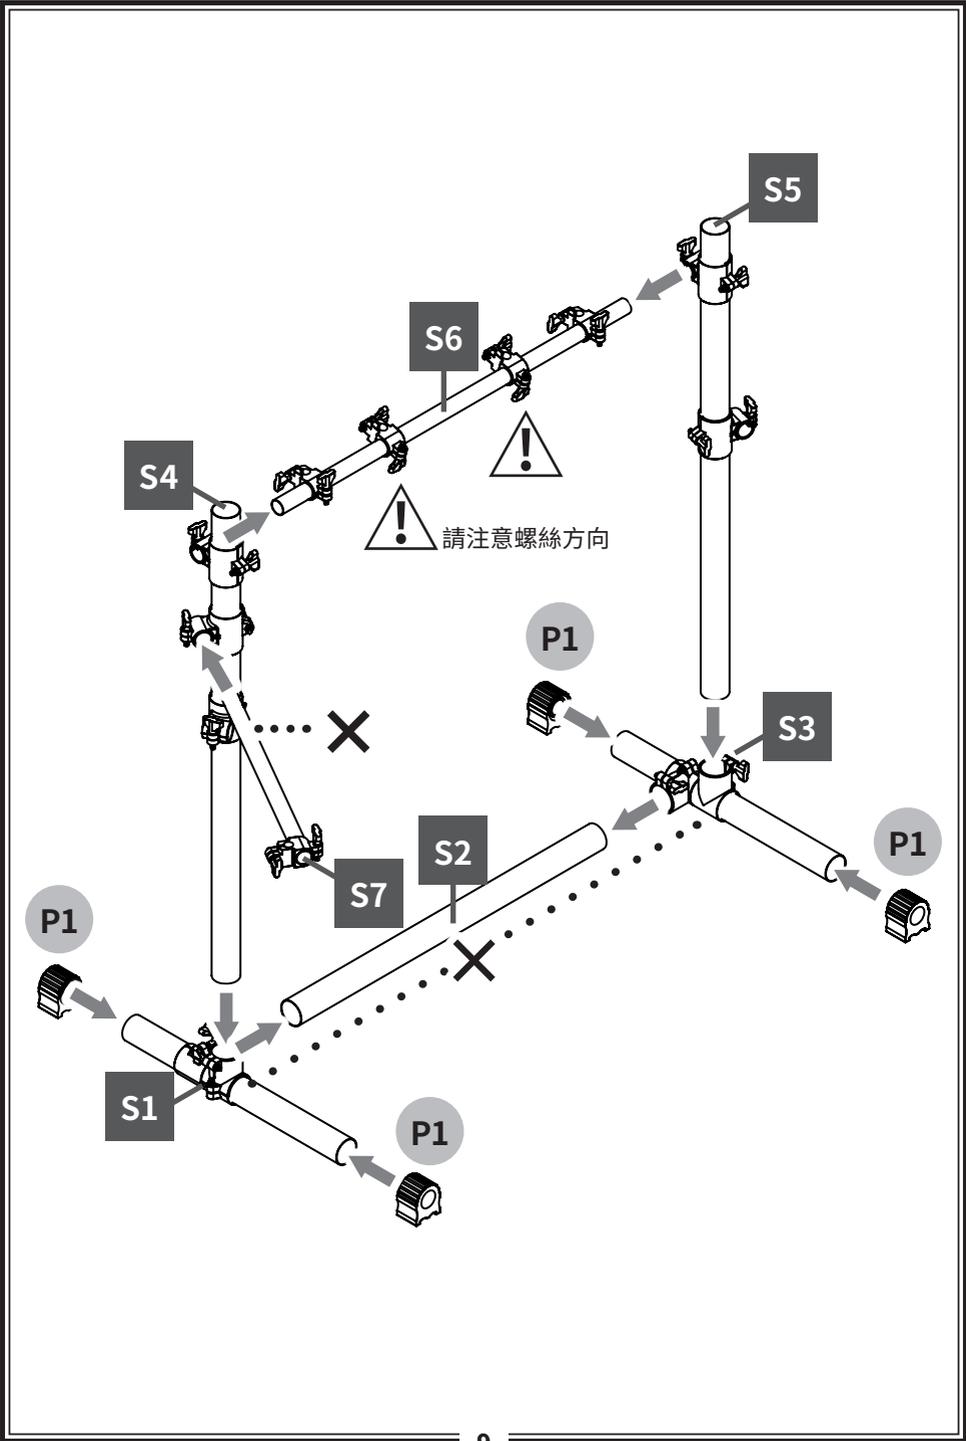

## Step 2

C3

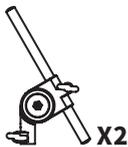


x2

S8  Ø2.22 x40 (cm) x2


S9  Ø1.27 x40 (cm) x2

S10  Ø1.27 x20 (cm) x3

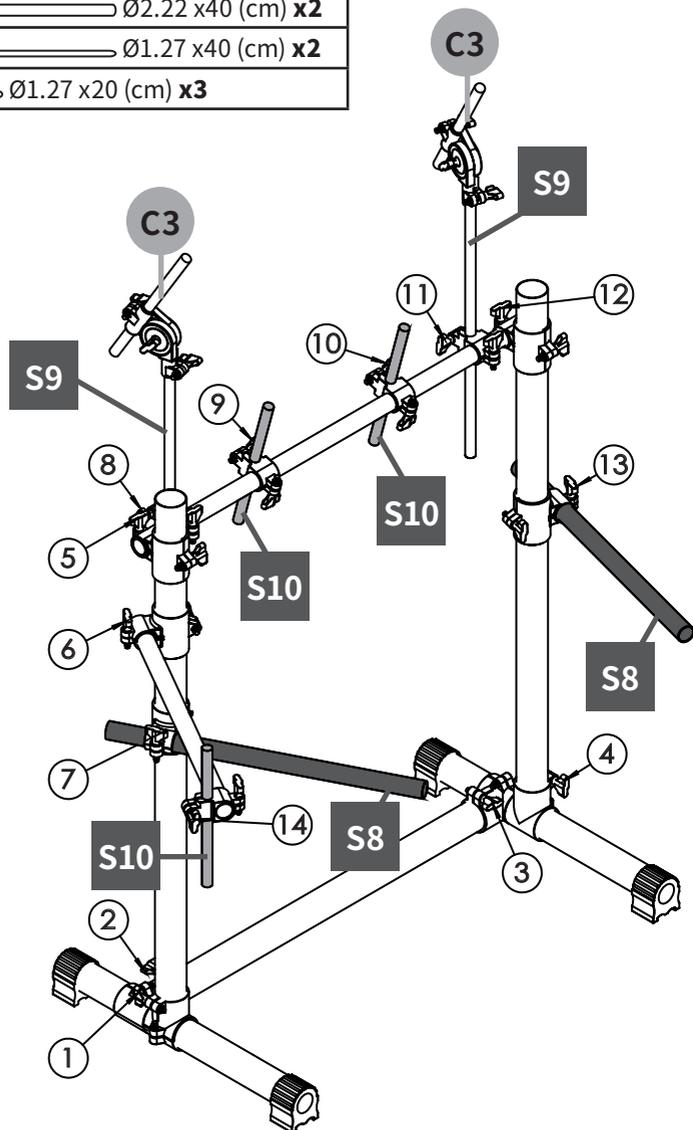


**Step 3**


T1		x14
T2		X14

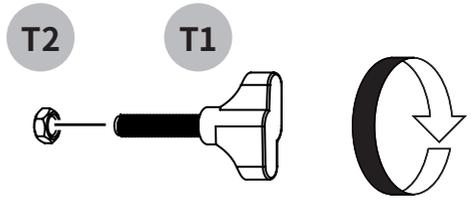


- 1
- 2
- 3
- 4

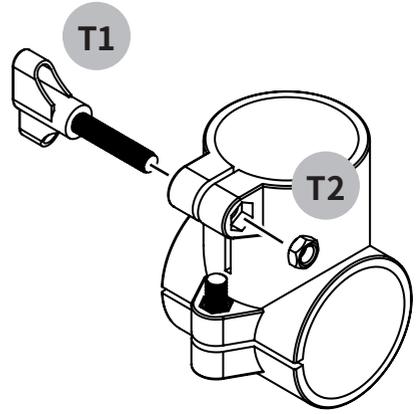

- 5
- 6
- 7
- 12
- 13


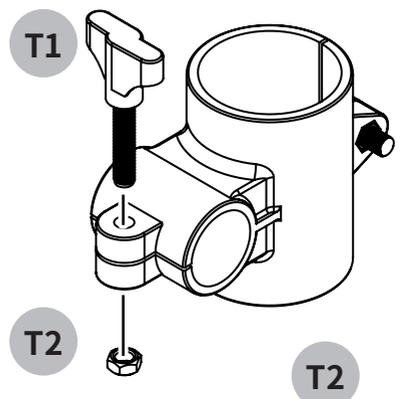


- 8
- 9
- 10
- 11
- 14



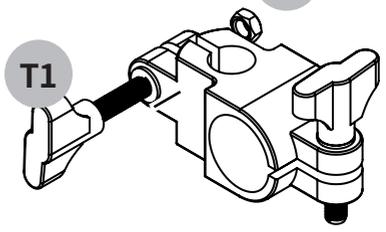


# Step 4


A2		x4
T1		x8
T2		x8
C1		x2
C2		x2

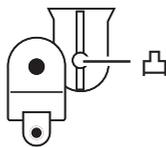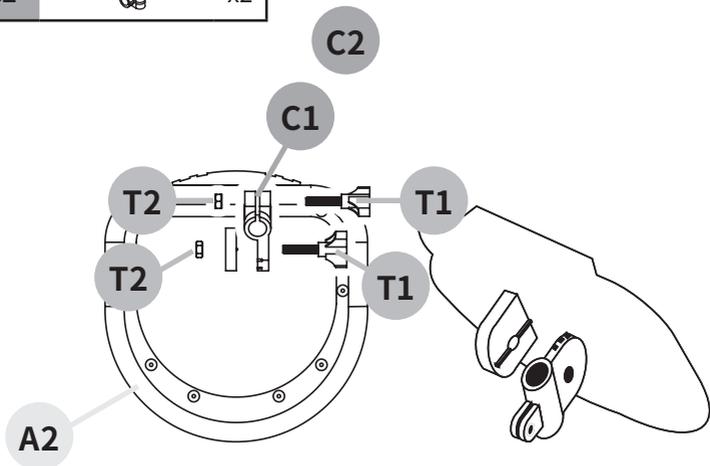


下列是錯誤的組裝方式

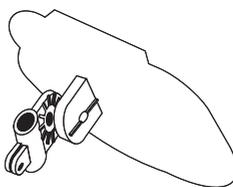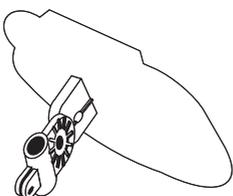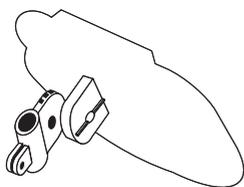

A2

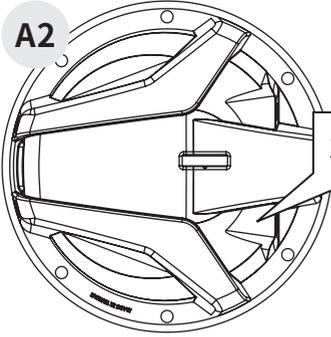


SNARE 1/4" 插孔

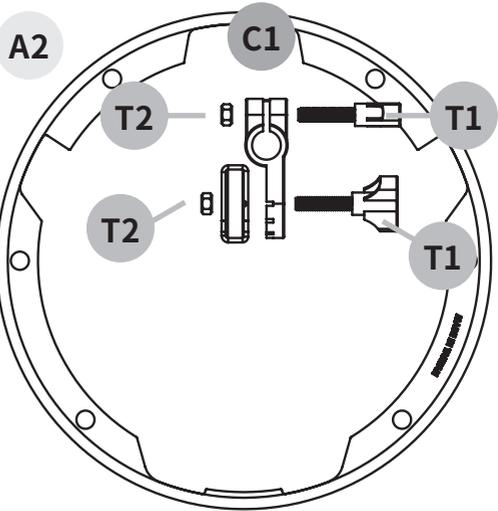

Convex

Groove

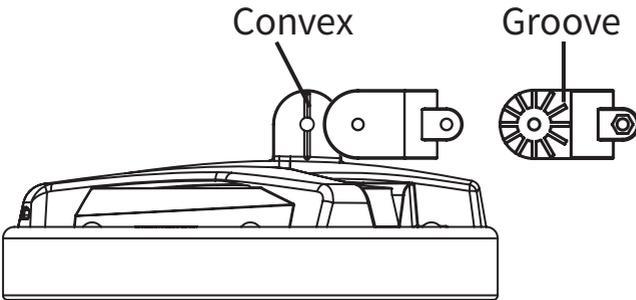

將打擊墊上的凸點結合接頭上的凹槽。

# Step 5

A2		x1
A3		x3
A4		x3
P2		X2
P3		X8


## NOTE

轉鬆或轉緊來調整銅鈸

轉鬆




轉緊

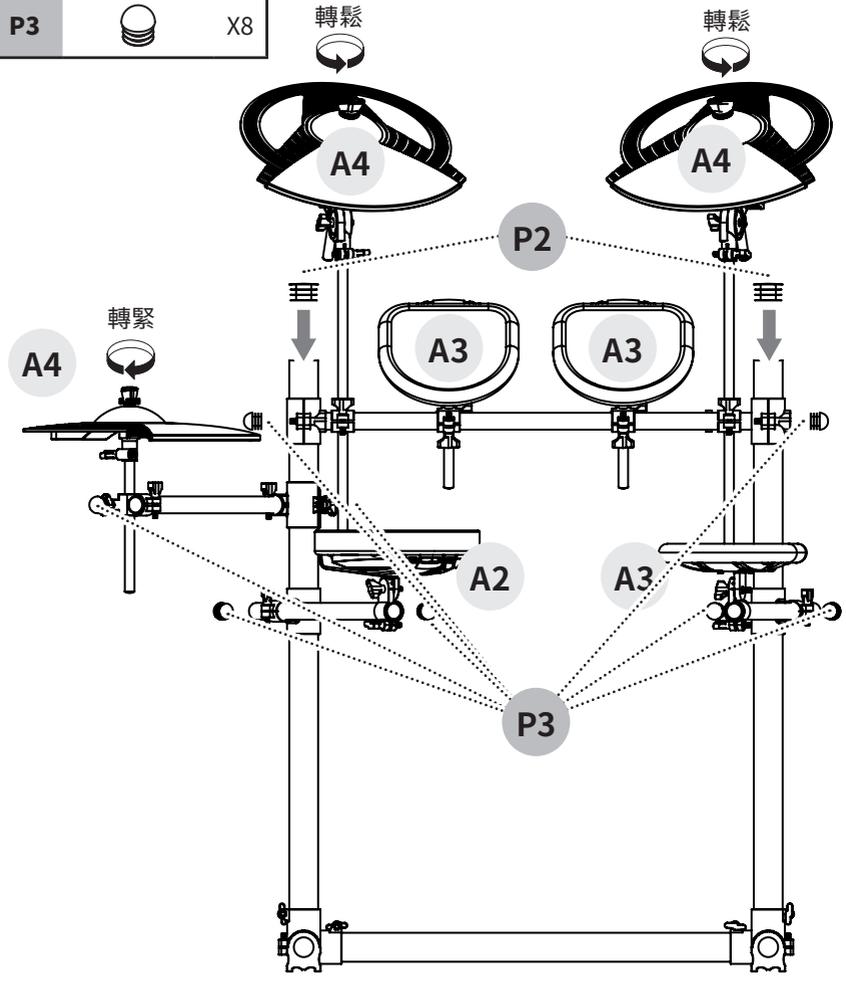


# 大鼓

A3	 x1	A6	 x1	T1	 x2
A7	 x1			T2	 x1

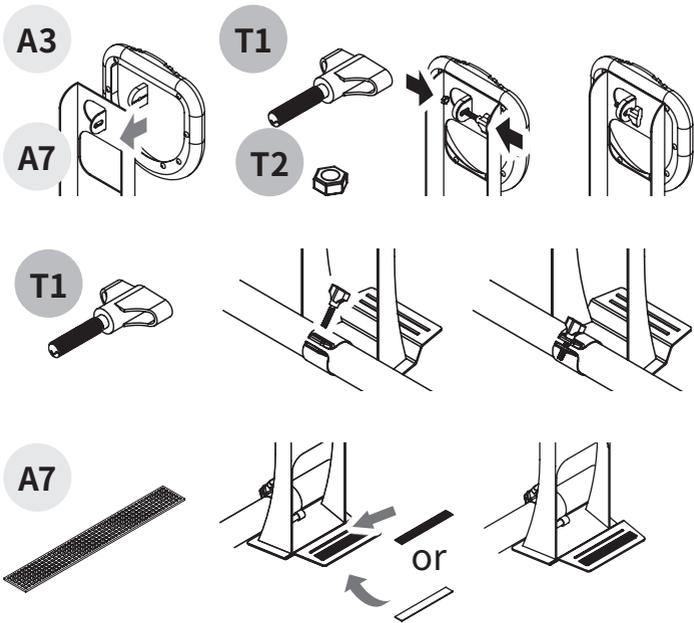

背膠止滑墊是用來配合不同大鼓踏板的高度。

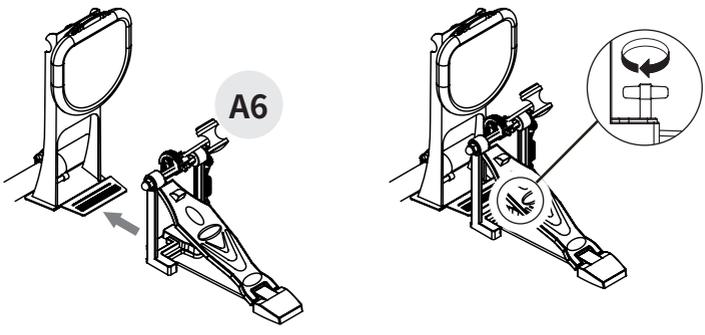

## 安裝到支架

A1



x1

C4





x1


從背面將U型連接座扣進音源機，連接到支架上。

鎖緊背面的螺絲。



移除表面保護膜。

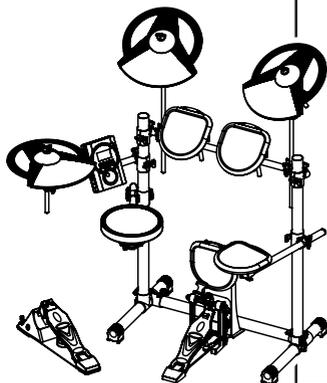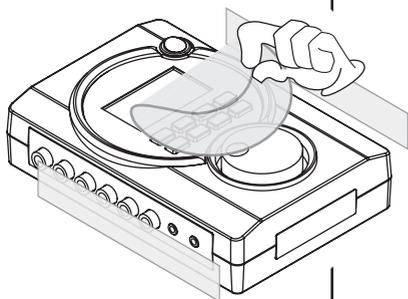

A1

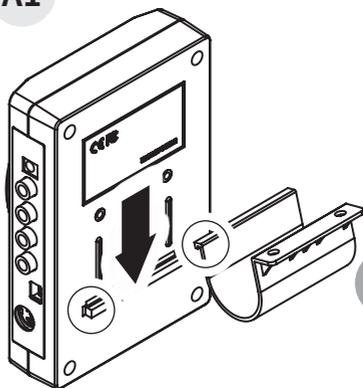

C4

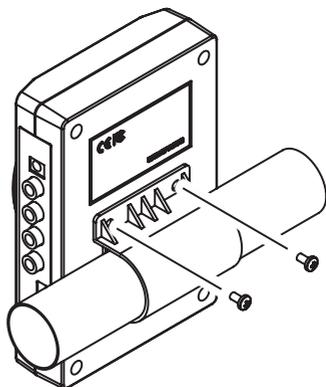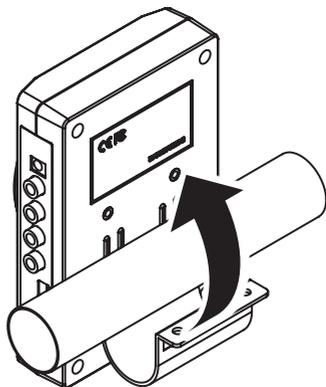

### 控制器

A5



x1

Hi-Hat 和 Hi-Hat 控制器是模擬真實 Hi-Hat 放置。



### 抓鉞效果


A4



x2


- ④ CYMBAL 1
- ⑦ CYMBAL 2

A4

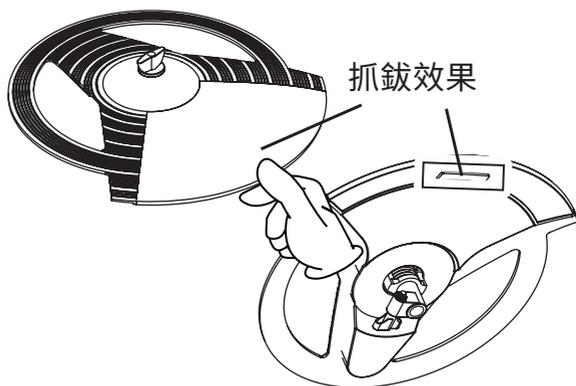

音源線

 L2



x1

(藍)

 
L3



x4

(黑)


L4



x3

(藍)

 L5



x1

 
(黑)

連接音源線到打擊墊,腳踏和音源機.

單聲道線(一條黑線)



立體聲線(兩條黑線)



① ② ④ ⑦

必需使用立體聲線.

② SNARE




1/4" 插孔

L2

③ TOM1

⑧ TOM2

⑨ TOM3

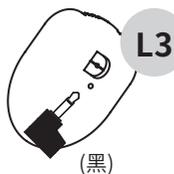

L3

(黑)

L4


(藍)

① HI-HAT

④ CYMBAL 1

⑦ CYMBAL 2

⑤ Hi-Hat CTRL

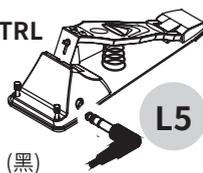


L5


(黑)

L3

⑩ BASS DRUM

(黑)

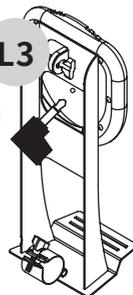

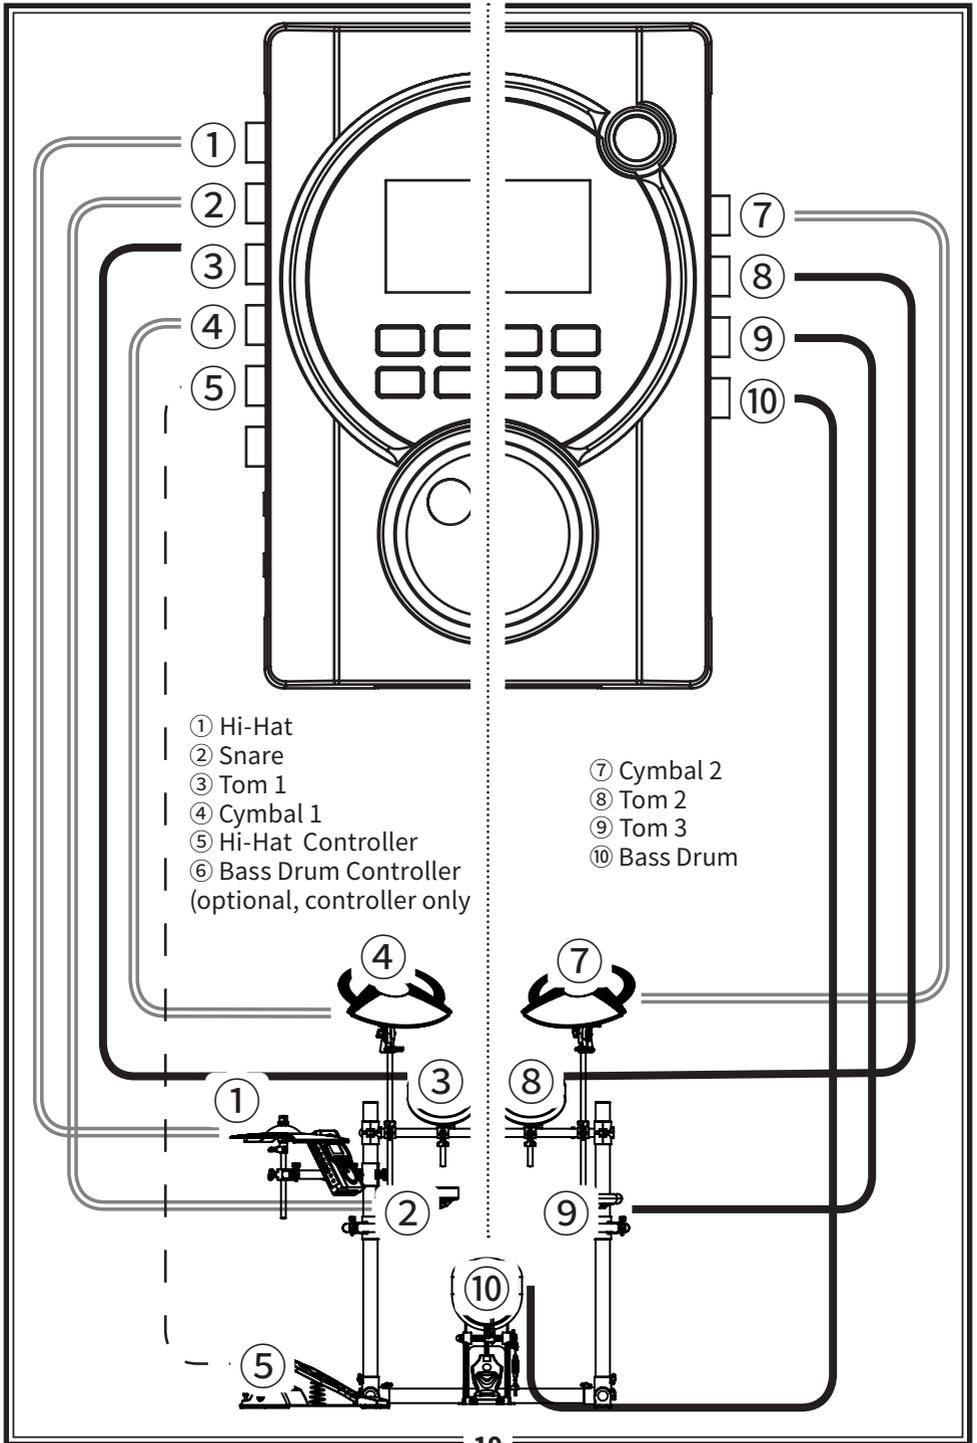


### 束線帶

B3






x2

理線時可以利用蝴蝶螺絲  
作為固定工具, 沿著鐵管  
走線.

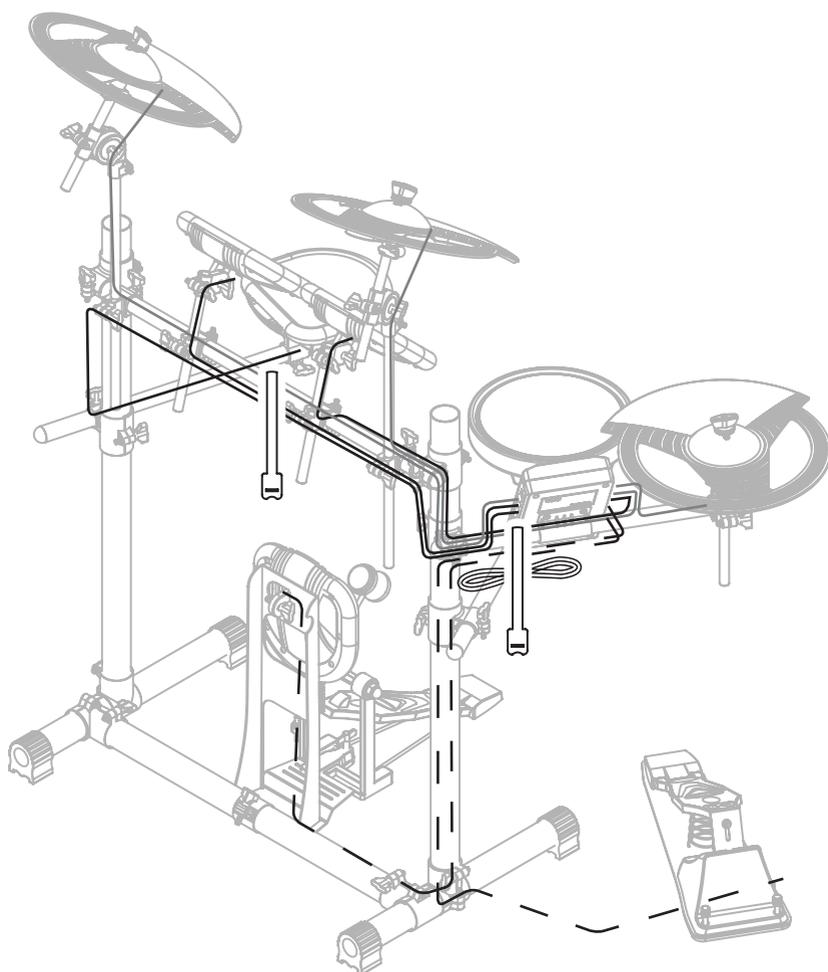



## 2-zone ② Snare

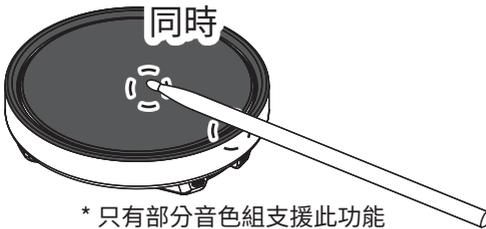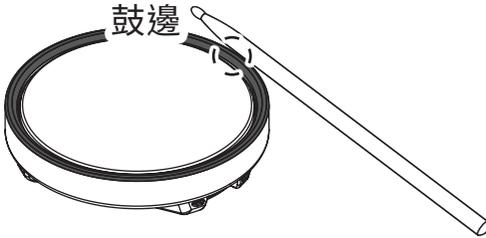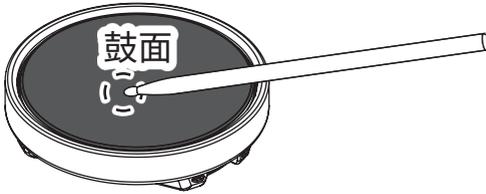

\* 只有部分音色組支援此功能

## 1-zone+choke

- ① Hi-Hat
- ④ Cymbal 1
- ⑦ Cymbal 2

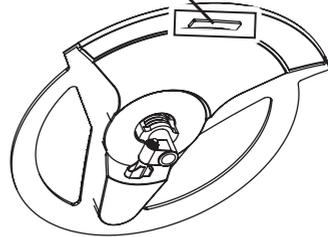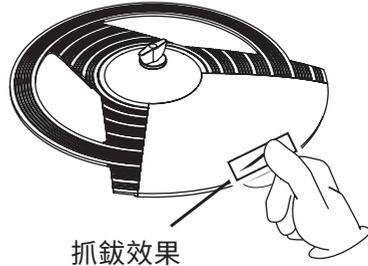

## 連續型 ⑤ Hi-Hat 控制器




全開

在 Hi-Hat 開閉之間更加真實的聲音變化，如全開，無段式半開，全閉，自然回饋。

全閉

自然回饋

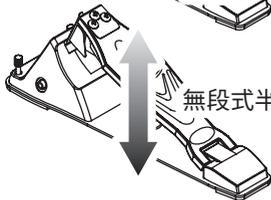

無段式半開連續的音色變化

MS314		1 HI-HAT	2 SNARE	RIM	3 TOM1	4 TOM2	5 TOM3	6 CYMBAL1	7 CYMBAL2	8 BASS DRUM
搖滾 -1	01	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
爵士 -1	02	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
金屬 -1	03	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
藍調 -1	04	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
力量 -1	05	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
電子 -1	06	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	特效	碎音鈸1	碎音鈸2	大鼓
中國太鼓 -1	07	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
拉丁 -1	08	沙鈴	低康加鼓	康加邊	高康加鼓	落地康加鼓	牛鈴	碎音鈸1	碎音鈸2	大鼓
天巴鼓 -1	09	腳踏鈸	小鼓	木邊	高天巴鼓	低天巴鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
融合 -1	10	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
搖滾 -2	11	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE1	大鼓
爵士 -2	12	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE1	大鼓
金屬 -2	13	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE1	大鼓
藍調 -2	14	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE1	大鼓
力量 -2	15	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE1	大鼓
電子 -2	16	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	特效	碎音鈸1	RIDE1	大鼓
拉丁 -2	17	沙鈴	低康加鼓	康加邊	高康加鼓	落地康加鼓	低天巴鼓	碎音鈸1	RIDE1	大鼓
融合 -2	18	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE1	大鼓
搖滾 -3	19	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE2	大鼓
爵士 -3	20	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE2	大鼓
金屬 -3	21	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE2	大鼓
藍調 -3	22	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE2	大鼓
力量 -3	23	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE2	大鼓
電子 -3	24	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	特效	碎音鈸1	RIDE2	大鼓
拉丁 -3	25	沙鈴	低康加鼓	康加邊	高康加鼓	落地康加鼓	牛鈴	碎音鈸1	RIDE2	大鼓
融合 -3	26	腳踏鈸	小鼓	鼓邊	高中鼓	低中鼓	落地鼓	碎音鈸1	RIDE2	大鼓
搖滾 -4	27	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	中國鈸	大鼓
爵士 -4	28	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	碎音鈸2	大鼓
金屬 -4	29	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	中國鈸	大鼓
藍調 -4	30	腳踏鈸	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	中國鈸	大鼓
力量 -4	31	大鼓	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	中國鈸	大鼓
電子 -4	32	大鼓	小鼓	木邊	高中鼓	低中鼓	特效	碎音鈸1	碎音鈸2	大鼓
融合 -4	33	大鼓	小鼓	木邊	高中鼓	低中鼓	落地鼓	碎音鈸1	中國鈸	大鼓



For more information please visit our website

**[www.awowo.com](http://www.awowo.com)**

201 基隆市信義區正信路 151 巷 1 號 4 樓

**Tel: (02) 2465-9858**

**Fax: (02) 2465-8261**

